




THUNDER 895 Amplifier Input Connections

AMPLIFIER

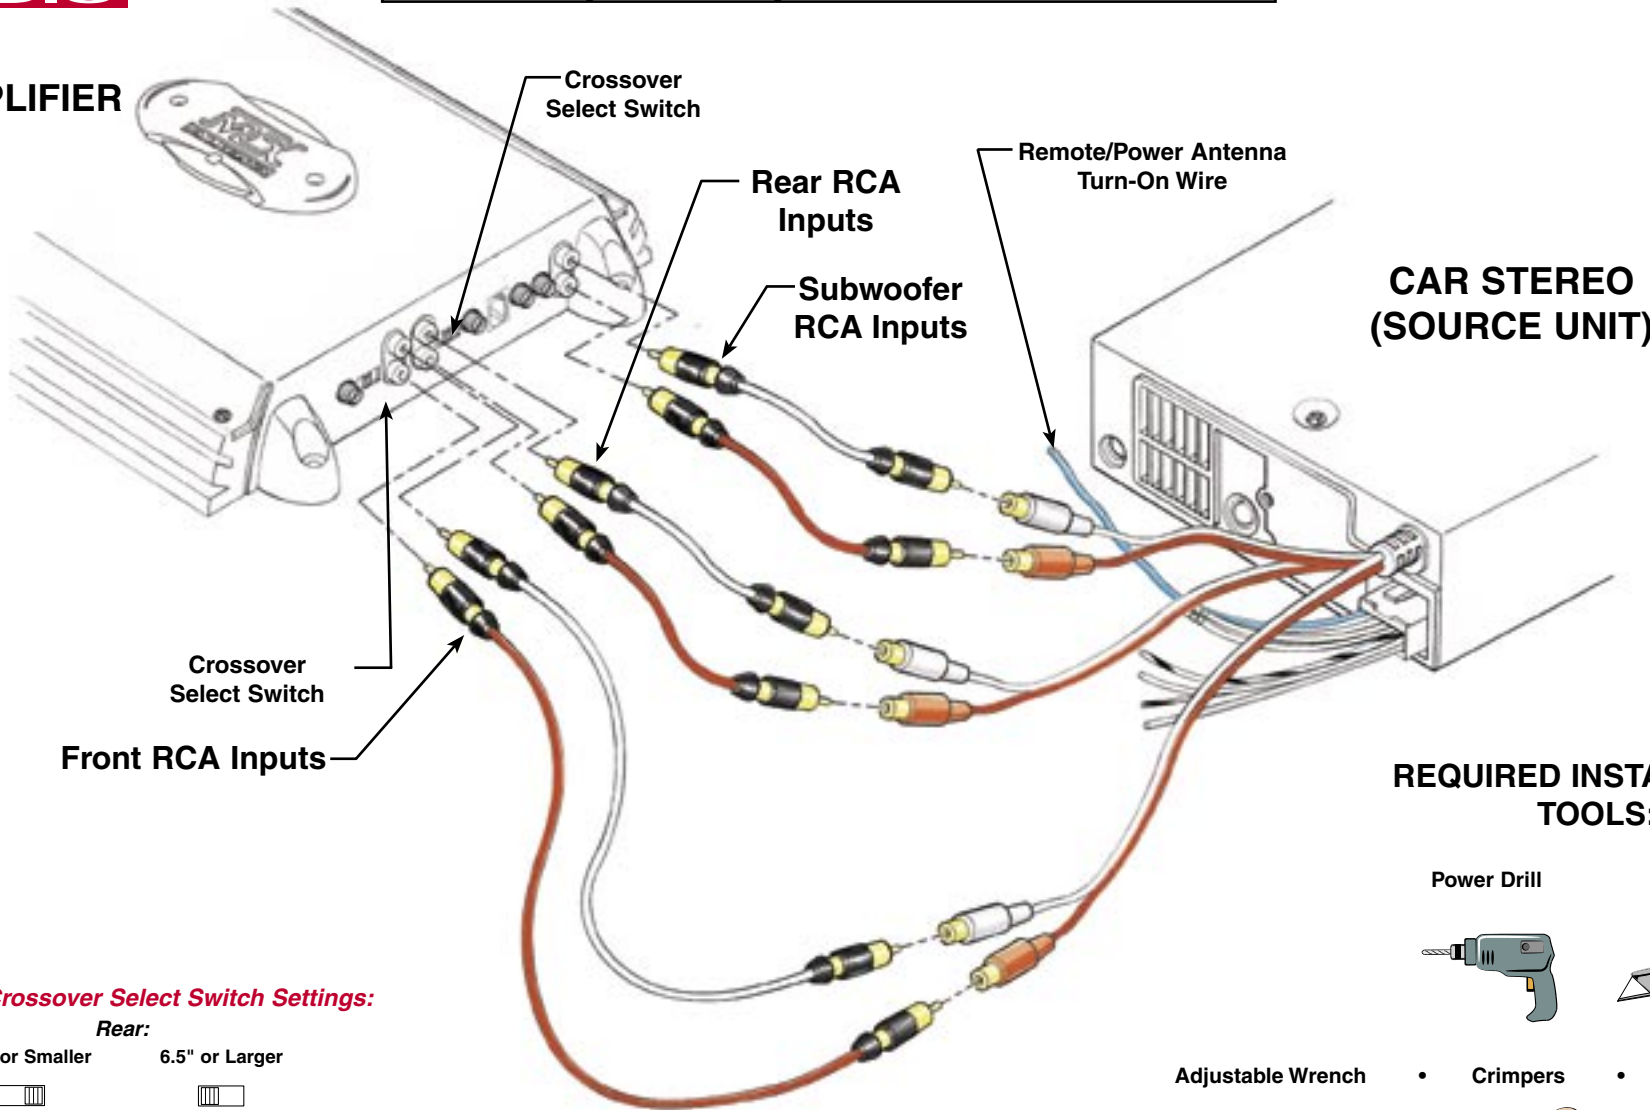

CAR STEREO
(SOURCE UNIT)

REQUIRED INSTALLATION TOOLS:

Power Drill



Utility Knife



Adjustable Wrench

• Crimpers

• Screw Driver

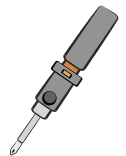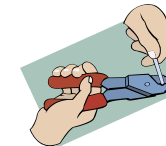

Amplifier Crossover Select Switch Settings:

Rear:

5.25" or Smaller

6.5" or Larger



FR HP

FR HP

Front:

5.25" or Smaller

6.5" or Larger



FR HP

FR HP


For installation options go to mtx.com

Part #: NDM291



THUNDER 895

Amplifier Output Connections

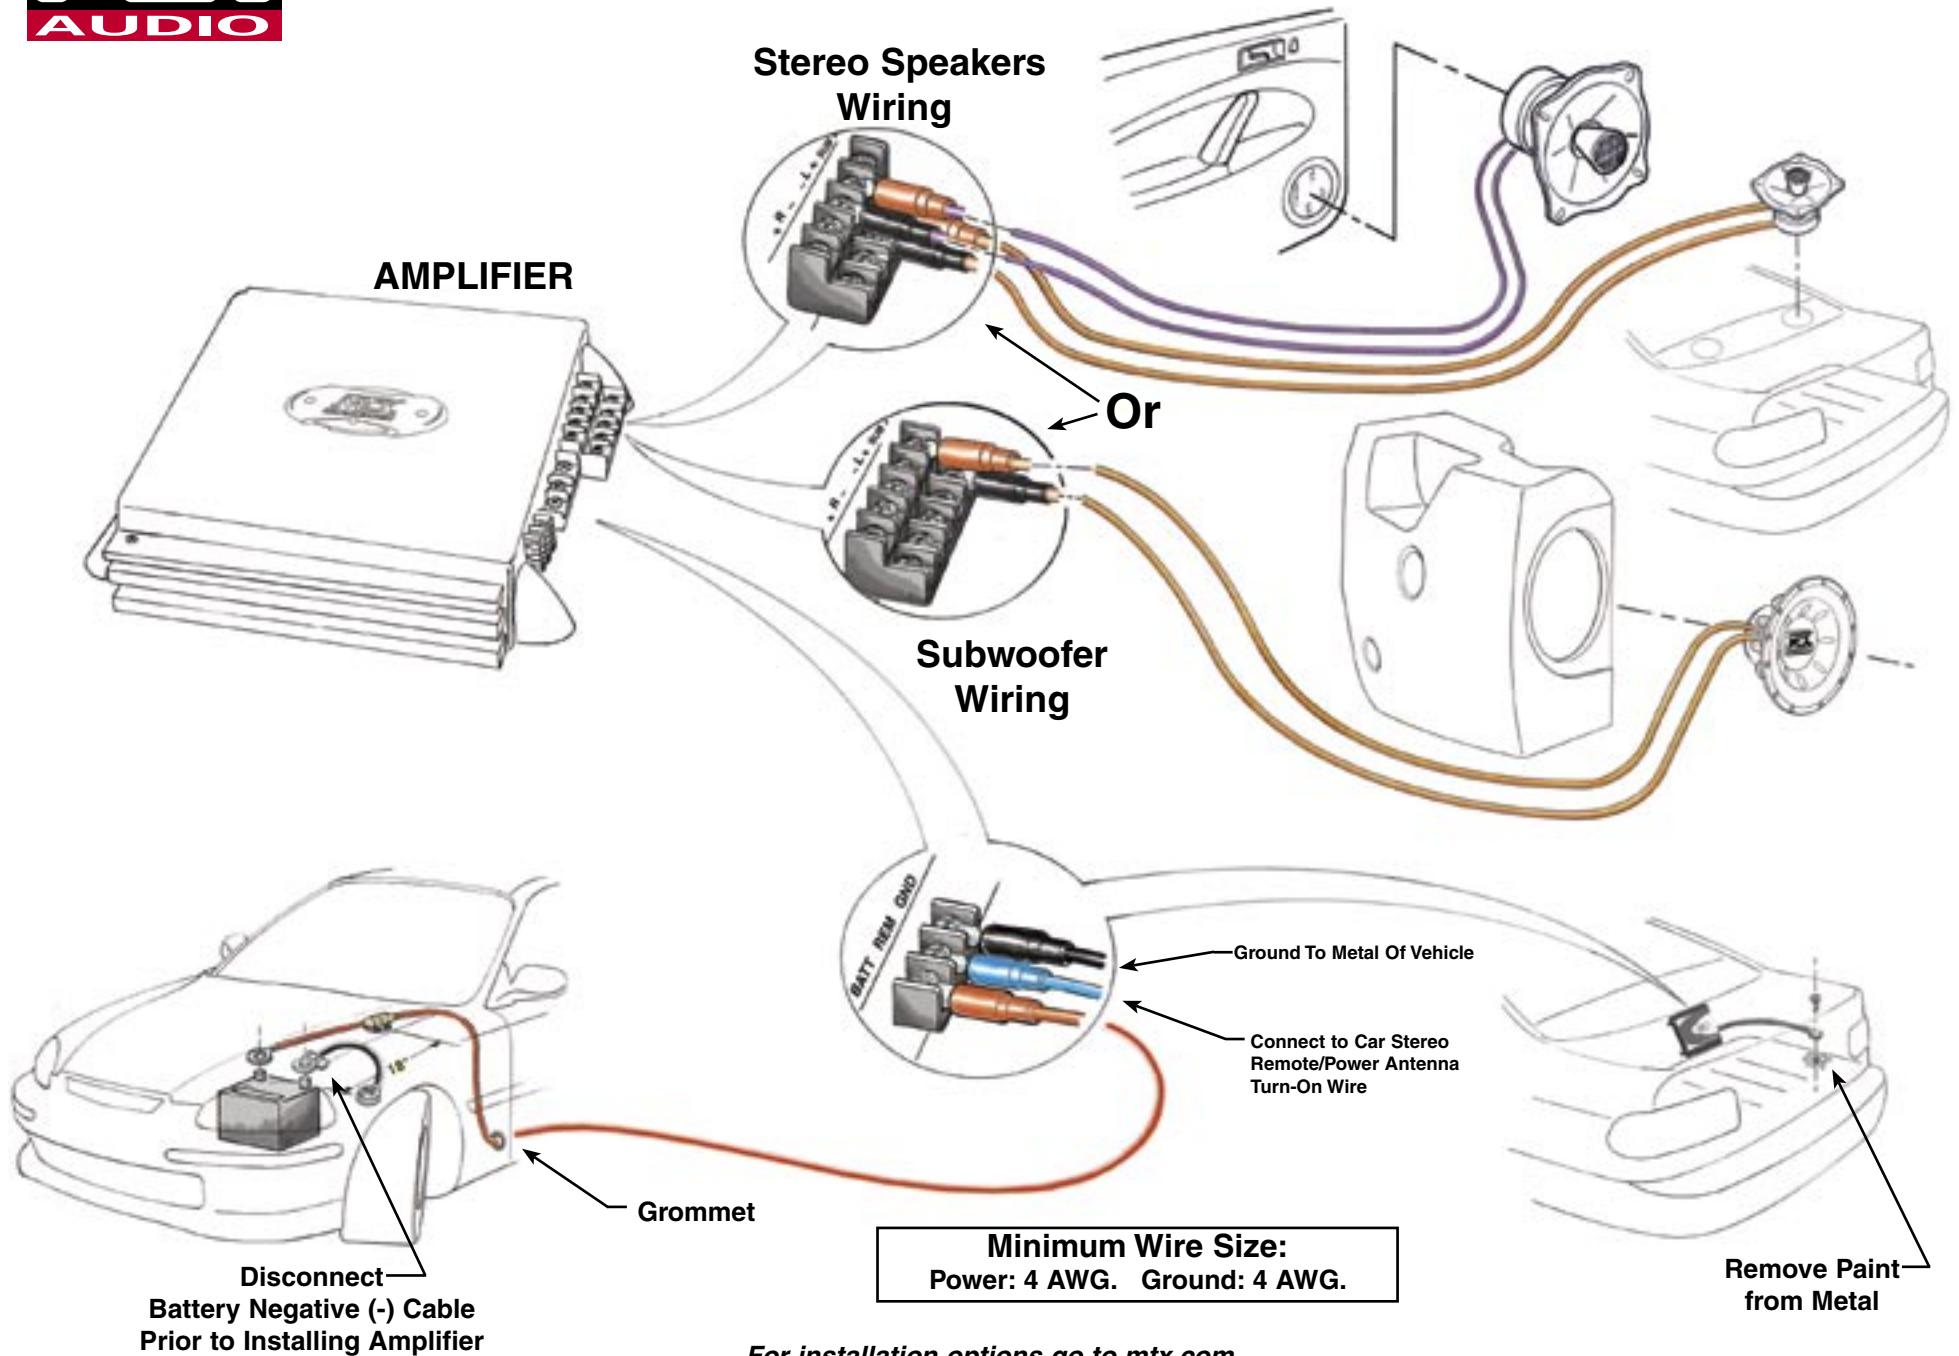

For installation options go to mtx.com